





Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Teltitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD,


- 1 - B 961058 XX
- 2+1 - B 9444 XX
- 2a+1 - B 9445 XX
- 3 - B D140 XX
- 3a - A 861273 AA
- 3b - B 0384 MY
- 3c - B 0024 XX
- 4 - B C774 XX
- 5 - B C807 XX
- 6 - B E175 XX

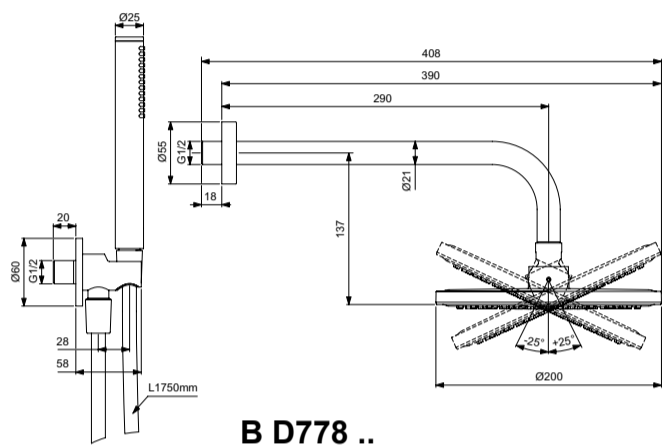


B D778 ..

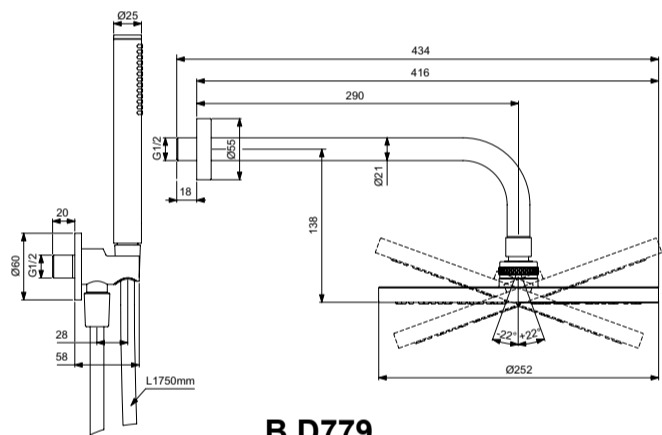



B D779 ..

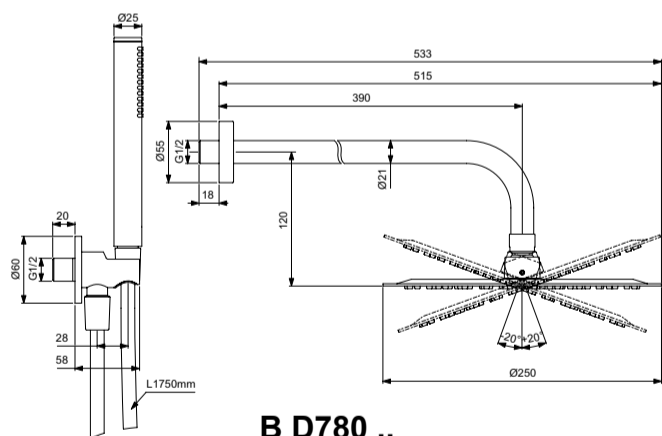

B D780 ..

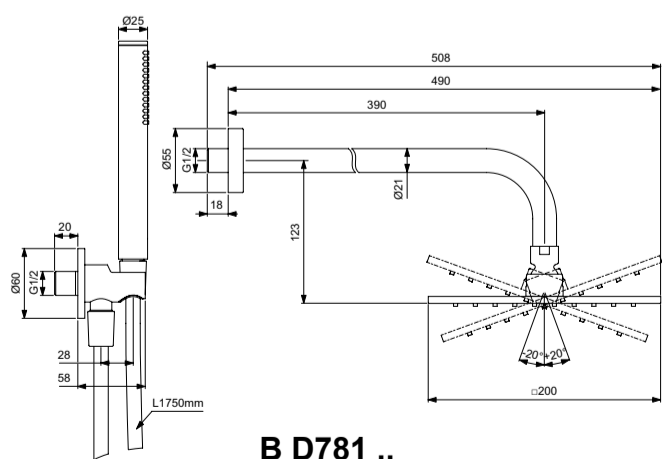

B D781 ..


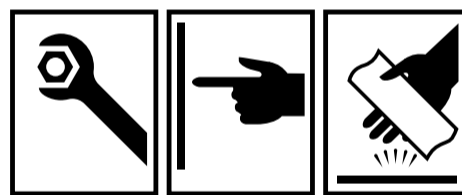
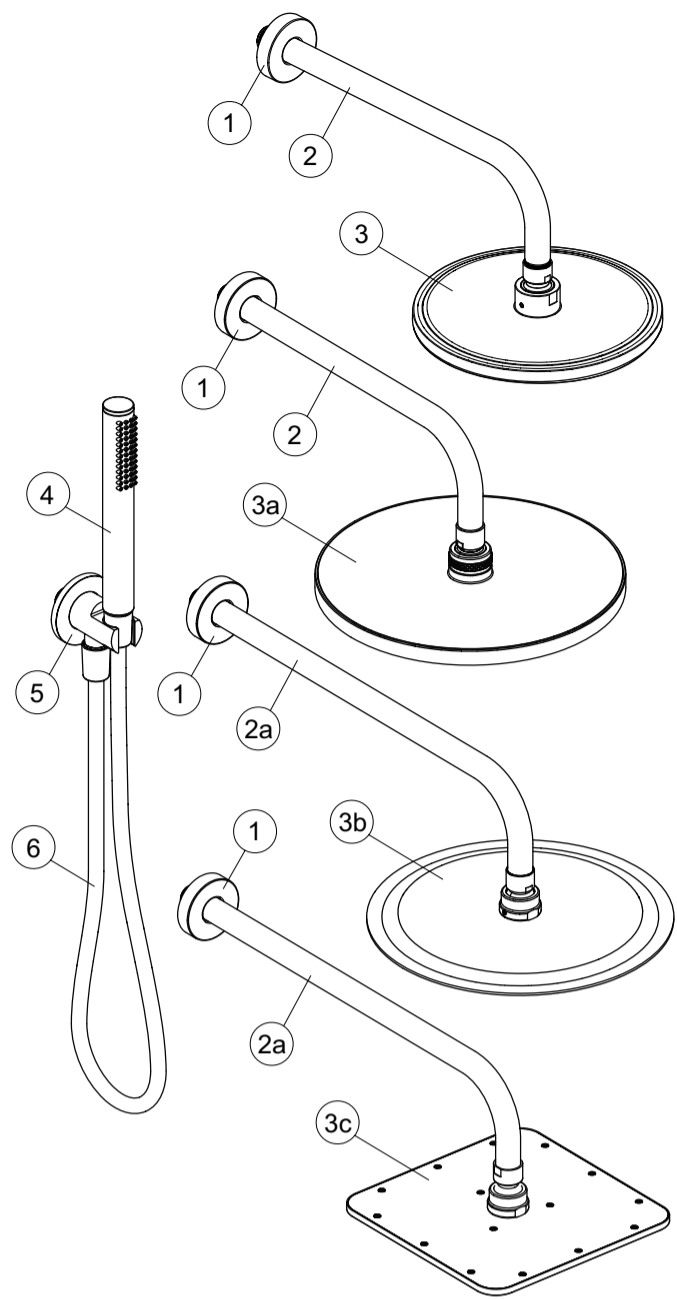


Ideal Standard

IDEALRAIN

05.2023 / B565212

 B D389 ..

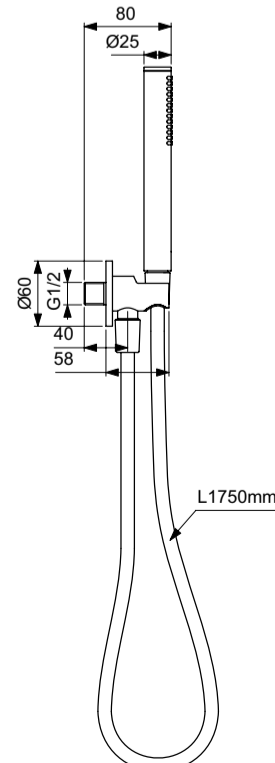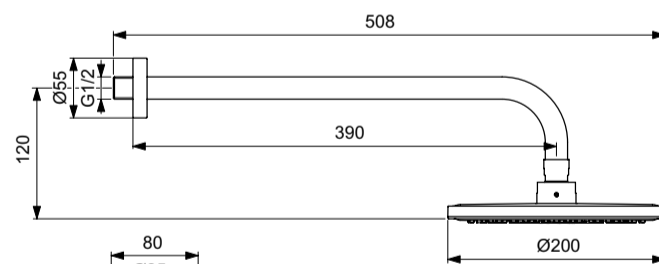

Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium

<http://www.idealstandardinternational.com>



