


Pos.	Signify	Spare parts-Nr.	Quantity	Pos.	Signify	Spare parts-Nr.	Quantity
1	Lever	B961852AA	1 Set				
2	Rubber button	A963751NU	1 Pcs.				
3	Cap M38x1.5	B961373AA	1 Pcs.				
4	Screw M38x1.5	B961374NU	1 Set				
5	Hot limit stop	A861181NU	1 Pcs.				
6	Cartridge Ø38mm	A861156NU*	1 Set				
7	Neop.cascade M24x1-D	A960537AA	1 Pcs.				
8	Fixation set	A964520NU	1 Set				
9	Pull knob	B960486AA	1 Pcs.				
10	Diverter automatic	B960167AA	1 Pcs.				
11	Rv-patrone	A960944NU	2 Pcs.				

*Universal set (not all parts needed)

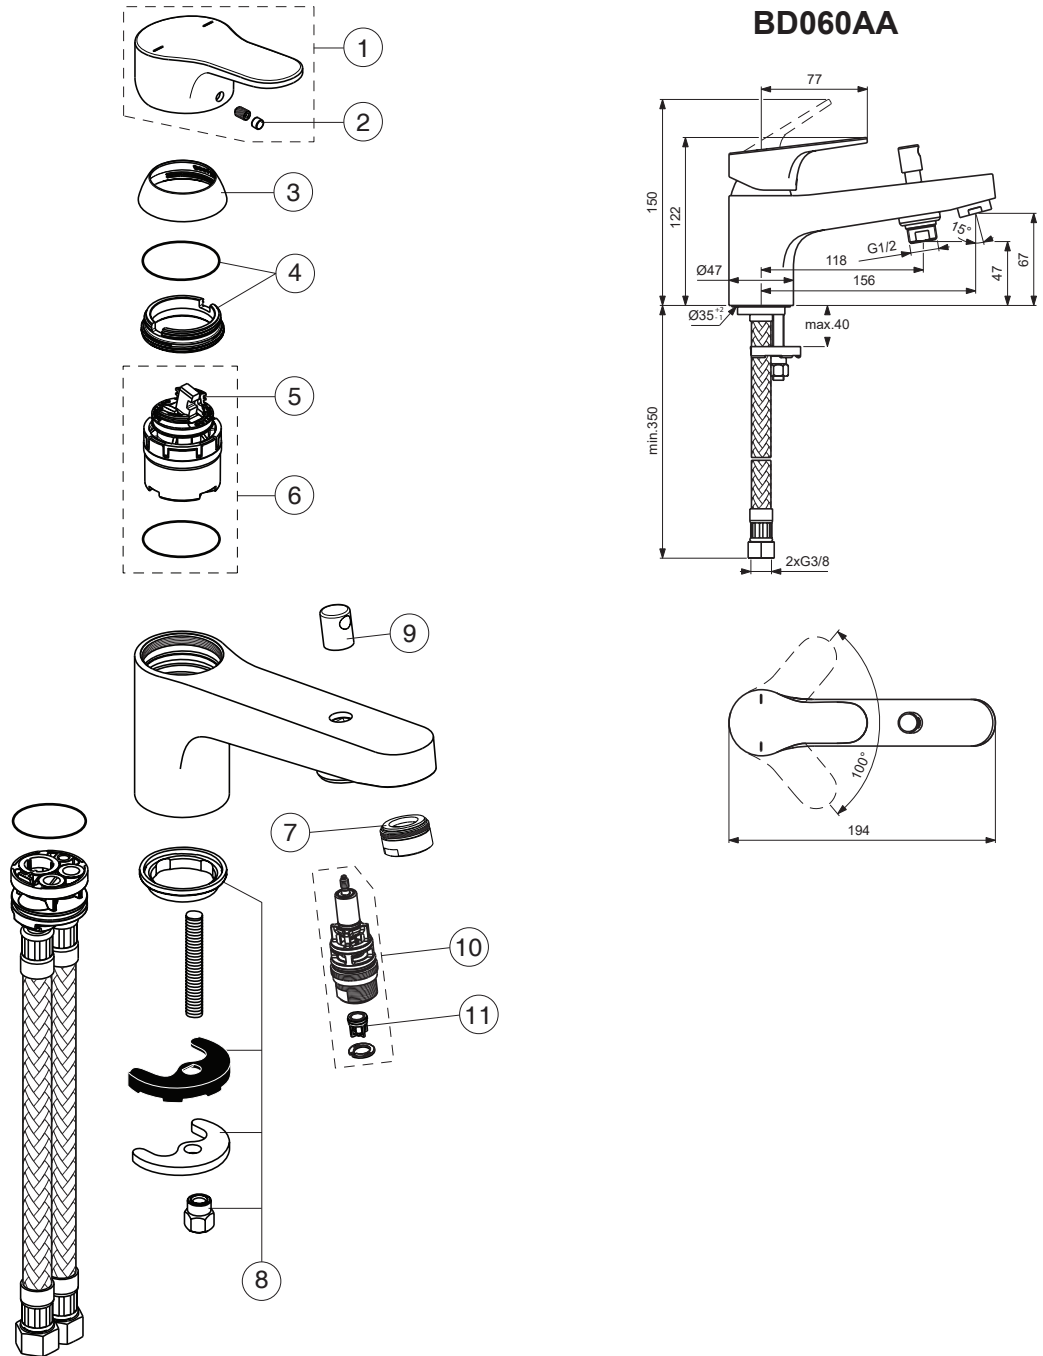

Pos.	Signify	Spare parts-Nr.	Quantity	Pos.	Signify	Spare parts-Nr.	Quantity
1	Lever	B961852AA	1 Set				
2	Rubber button	A963751NU	1 Pcs.				
3	Cap M38x1.5	B961373AA	1 Pcs.				
4	Screw M38x1.5	B961374NU	1 Set				
5	Hot limit stop	A861181NU	1 Pcs.				
6	Cartridge Ø38mm	A861156NU*	1 Set				
7	Neop.cascade M24x1-D	A960537AA	1 Pcs.				
8	Fixation set	A964520NU	1 Set				
9	Pull knob	B960486AA	1 Pcs.				
10	Diverter automatic	B960167AA	1 Pcs.				
11	Rv-patrone	A960944NU	2 Pcs.				

*Universal set (not all parts needed)